

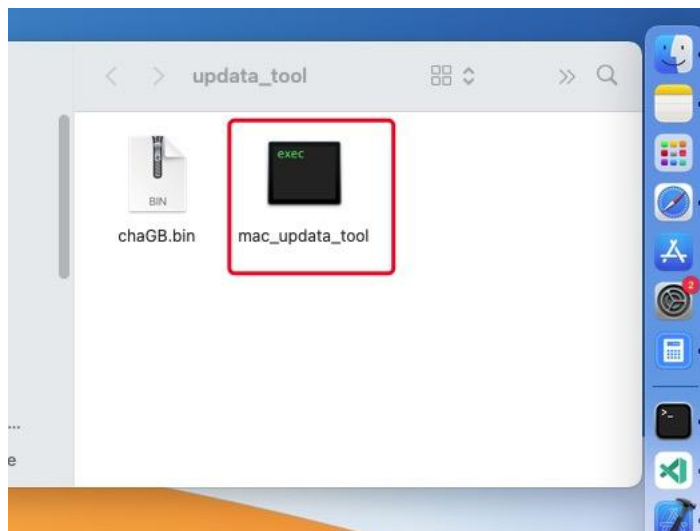


1. Use a "Micro-USB" cable to connect laptop and adapter.
2. Run "driver\_for\_mac.pkg" to install the driver into computer.
3. Confirm that the USB driver "driver\_for\_mac.pkg" is installed correctly
4. Put "updata\_tool.zip" in the desktop, double click to uncompress,

Please don't change the name of document after you uncompress

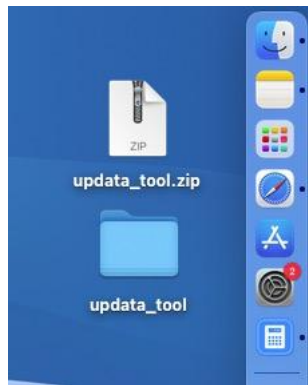

5. Click " mac\_updata\_tool ", there will be a page like this, which is used to select the serial port and the serial port number of the Tesla adapter

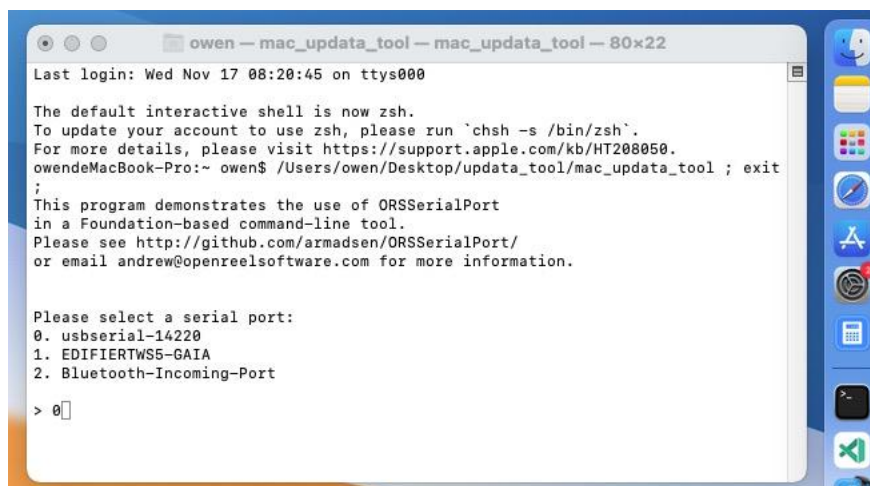

6, After selecting the serial port number, press Enter to upgrade, the interface looks like bellow , after upgrade , you can see the software version in the end

```
owen -- mac_updata_tool -- mac_updata_tool -- 80x22
2021-11-17 08:33:03.060 mac_updata_tool[20665:835527] downing..... 2 %
2021-11-17 08:33:03.280 mac_updata_tool[20665:835527] downing..... 2 %
2021-11-17 08:33:03.496 mac_updata_tool[20665:835529] downing..... 2 %
2021-11-17 08:33:03.719 mac_updata_tool[20665:835529] downing..... 3 %
2021-11-17 08:33:03.936 mac_updata_tool[20665:835527] downing..... 3 %
2021-11-17 08:33:04.161 mac_updata_tool[20665:835529] downing..... 3 %
2021-11-17 08:33:04.381 mac_updata_tool[20665:835529] downing..... 3 %
2021-11-17 08:33:04.597 mac_updata_tool[20665:835529] downing..... 4 %
2021-11-17 08:33:04.821 mac_updata_tool[20665:835529] downing..... 4 %
2021-11-17 08:33:05.036 mac_updata_tool[20665:835527] downing..... 4 %
2021-11-17 08:33:05.258 mac_updata_tool[20665:835527] downing..... 4 %
2021-11-17 08:33:05.479 mac_updata_tool[20665:835527] downing..... 5 %
2021-11-17 08:33:05.696 mac_updata_tool[20665:835527] downing..... 5 %
2021-11-17 08:33:05.916 mac_updata_tool[20665:835527] downing..... 5 %
2021-11-17 08:33:06.137 mac_updata_tool[20665:835527] downing..... 6 %
2021-11-17 08:33:06.359 mac_updata_tool[20665:835529] downing..... 6 %
2021-11-17 08:33:06.580 mac_updata_tool[20665:835528] downing..... 6 %
2021-11-17 08:33:06.797 mac_updata_tool[20665:835527] downing..... 6 %
2021-11-17 08:33:07.017 mac_updata_tool[20665:835528] downing..... 7 %
2021-11-17 08:33:07.240 mac_updata_tool[20665:835527] downing..... 7 %
2021-11-17 08:33:07.461 mac_updata_tool[20665:835527] downing..... 7 %
```

```
owen -- mac_updata_tool -- mac_updata_tool -- 104x37
2021-11-17 08:34:18.737 mac_updata_tool[20665:835528] downing..... 92 %
2021-11-17 08:34:18.956 mac_updata_tool[20665:835528] downing..... 92 %
2021-11-17 08:34:19.180 mac_updata_tool[20665:835528] downing..... 92 %
2021-11-17 08:34:19.397 mac_updata_tool[20665:835529] downing..... 92 %
2021-11-17 08:34:19.620 mac_updata_tool[20665:835527] downing..... 93 %
2021-11-17 08:34:19.836 mac_updata_tool[20665:835527] downing..... 93 %
2021-11-17 08:34:20.061 mac_updata_tool[20665:835527] downing..... 93 %
2021-11-17 08:34:20.279 mac_updata_tool[20665:835527] downing..... 93 %
2021-11-17 08:34:20.497 mac_updata_tool[20665:835529] downing..... 94 %
2021-11-17 08:34:20.718 mac_updata_tool[20665:835527] downing..... 94 %
2021-11-17 08:34:20.937 mac_updata_tool[20665:835529] downing..... 94 %
2021-11-17 08:34:21.160 mac_updata_tool[20665:835527] downing..... 95 %
2021-11-17 08:34:21.380 mac_updata_tool[20665:835527] downing..... 95 %
2021-11-17 08:34:21.597 mac_updata_tool[20665:835529] downing..... 95 %
2021-11-17 08:34:21.819 mac_updata_tool[20665:835529] downing..... 95 %
2021-11-17 08:34:22.039 mac_updata_tool[20665:835529] downing..... 96 %
2021-11-17 08:34:22.260 mac_updata_tool[20665:835529] downing..... 96 %
2021-11-17 08:34:22.477 mac_updata_tool[20665:835527] downing..... 96 %
2021-11-17 08:34:22.701 mac_updata_tool[20665:835527] downing..... 96 %
2021-11-17 08:34:22.918 mac_updata_tool[20665:835528] downing..... 97 %
2021-11-17 08:34:23.140 mac_updata_tool[20665:835527] downing..... 97 %
2021-11-17 08:34:23.361 mac_updata_tool[20665:835527] downing..... 97 %
2021-11-17 08:34:23.580 mac_updata_tool[20665:835528] downing..... 97 %
2021-11-17 08:34:23.798 mac_updata_tool[20665:835528] downing..... 98 %
2021-11-17 08:34:24.016 mac_updata_tool[20665:835527] downing..... 98 %
2021-11-17 08:34:24.241 mac_updata_tool[20665:835528] downing..... 98 %
2021-11-17 08:34:24.460 mac_updata_tool[20665:835527] downing..... 98 %
2021-11-17 08:34:24.679 mac_updata_tool[20665:835527] downing..... 99 %
2021-11-17 08:34:24.897 mac_updata_tool[20665:835528] downing..... 99 %
2021-11-17 08:34:25.116 mac_updata_tool[20665:835528] downing..... 99 %
2021-11-17 08:34:25.261 mac_updata_tool[20665:834492] downing..... 100 %
2021-11-17 08:34:25.262 mac_updata_tool[20665:834492] down load finish
2021-11-17 08:34:26.984 mac_updata_tool[20665:834492] 0: boot success
2021-11-17 08:34:26.994 mac_updata_tool[20665:834492] 0: PLC Type:
2021-11-17 08:34:27.225 mac_updata_tool[20665:834492] Lv type
2021-11-17 08:34:29.115 mac_updata_tool[20665:834492] 107: Firmware version 162
```